


| REVISION HISTORY |              |          |          |
|------------------|--------------|----------|----------|
| REV              | DESCRIPTION  | DATE     | APPROVED |
| 0                | DRAWN ON CAD | 02/20/12 |          |

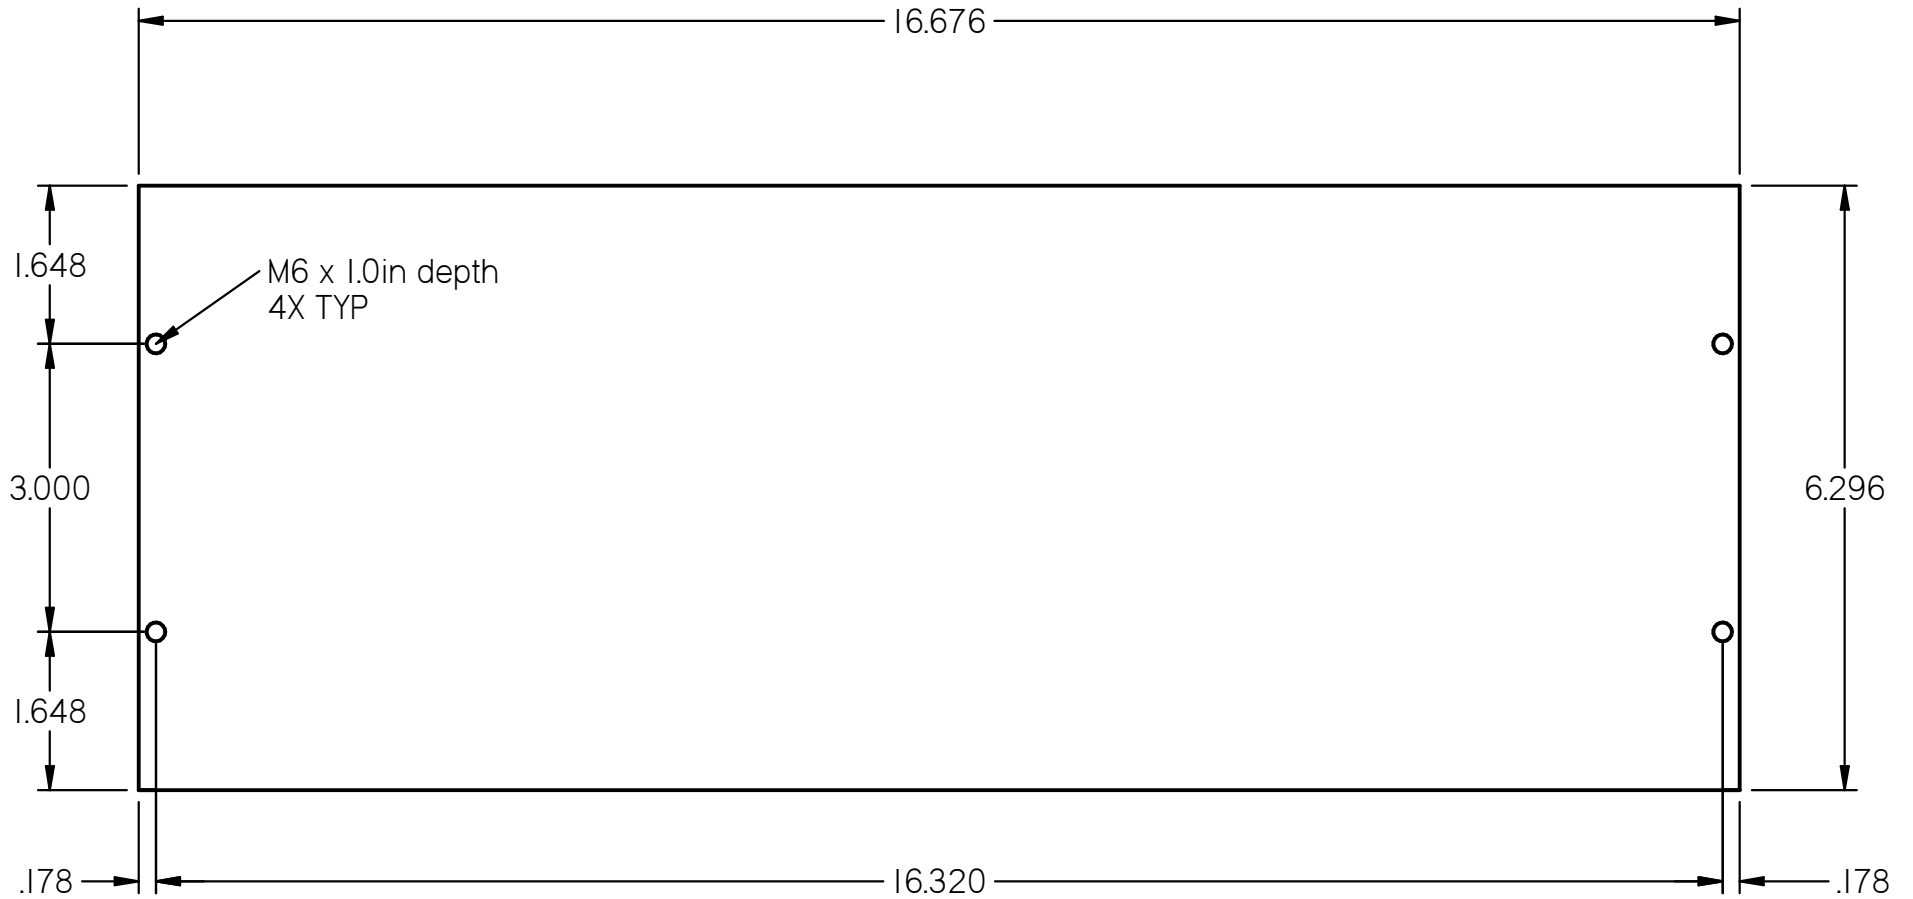

**NOTES:**

1. Use M6 hardware for mounting holes. Maximum depth is 1".
2. Drawing is 1:2 scale.

|   |           |          |  |         |
|---|-----------|----------|--|---------|
|   | NAME      | DATE     | NetGain Controls, Inc.                                   |         |
| DRAWN   | RYAN      | 02/20/12 |  |         |
| CHECKED   | RYAN      |          |  |         |
| PLOT DATE   | 1/23/2012 |          | TITLE: WarP-Drive Industrial Mechanical Mounting Diagram |         |
| THIS DRAWING IS THE PROPERTY OF NETGAIN CONTROLS, INC AND IS NOT TO BE USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT WAS SPECIFICALLY FURNISHED |           |          | SIZE   | REV     |
|   |           |          | A  | 0       |
|   |           |          | WD2_mechanical_mounting.dft                              |         |
|   |           |          | SCALE:   | WEIGHT: |